


CAMP CHAIR END CAPS

STEP 1 CHECK THE PRINT SCALE



SCALE CHECK

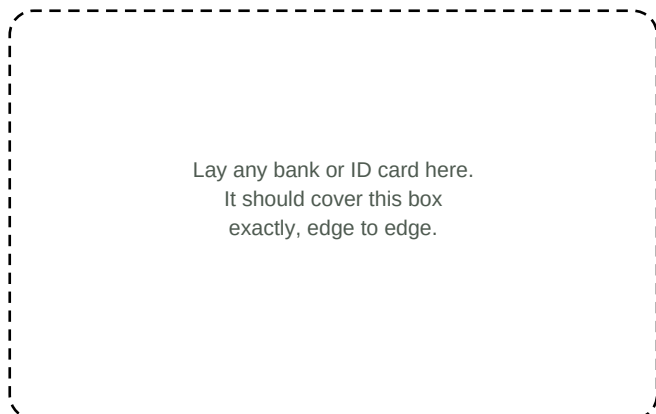

Card or bars do not match?





Reprint with scale set to 100% / "Actual size". Turn off "Fit to page" / "Shrink to fit".

STEP 2 POLE INSIDE Ø

Pull out the broken cap first. Cap size = the opening where the cap goes, not the outside of the pole.


A CIRCLE GAUGE

Stand the old cap on the circles, body down (the end that was in the pole). Your size is the smallest circle the body fits inside.

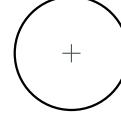

B RULER

Pole inside Ø: straight across the opening, through the centre.

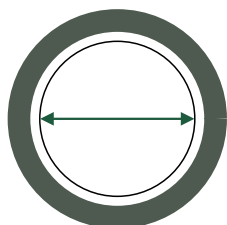

inside, edge to edge



Read to the nearest 0.5 mm.

Between two sizes? Choose the SMALLER size. The bungee holds the cap in.

C TAPER STRIP and OLD-CAP COMPARE: see page 2



MY POLE SIZE: _____ mm ORDER: M-LAB cap size _____ x _____ packs of 4

CAMP CHAIR END CAPS

C

TAPER STRIP


Cut out on the dashed line (cardstock works best). Keep it flat and push the narrow end straight into the pole, across the middle, until it stops. The line at the rim of the pole is your size. Half-mm ticks are on the edges.

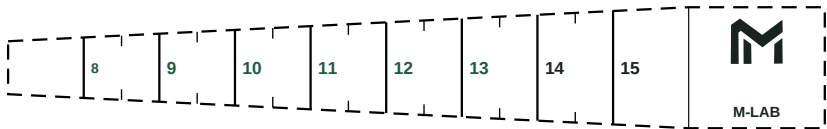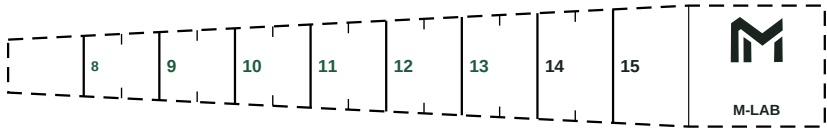

D

COMPARE YOUR OLD CAP (actual size)

Lay the old cap on the outlines. Match the part that goes INTO the pole, not the round head.

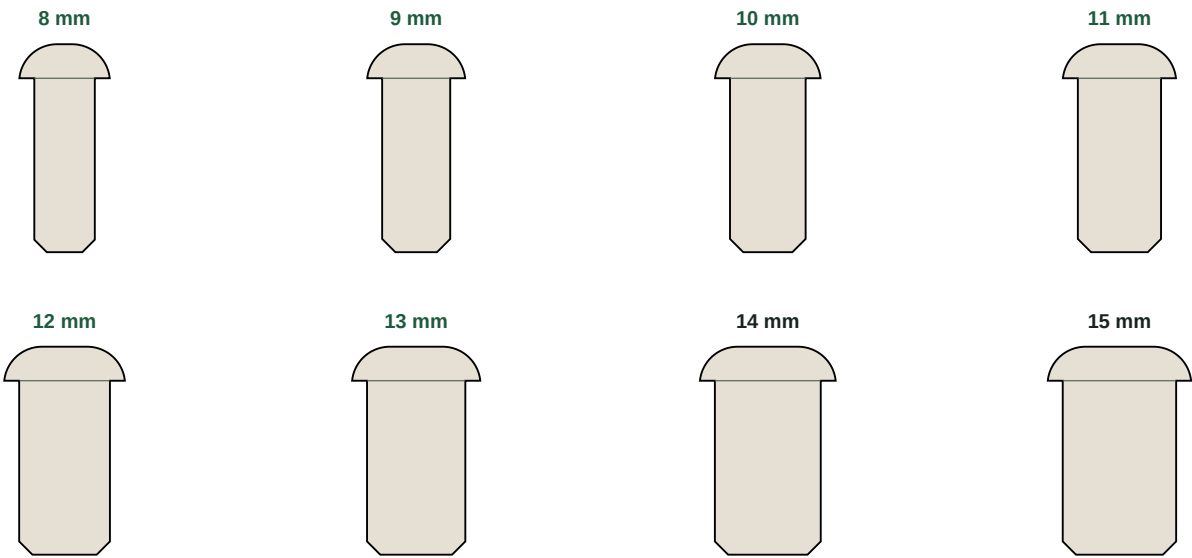

SIZE CHART

Cap size	8	9	10	11	12	13	14	15
Pole inside Ø	8.0	9.0	10.0	11.0	12.0	13.0	14.0	15.0
Head Ø	12	13	14	15	16	17	18	19

All sizes in mm. Every cap is 27.5 mm long. Most camp chairs use 8-13 mm.

M-LAB CAMP CHAIR END CAPS | SOLD IN PACKS OF 4 | SIZES 8-15 mm